

Raycap | STEALTH® SAMPLES

How to Get the Best Match

RECOMMENDED TOOLS

1. Sample
2. Duct tape
3. Camera
4. SPOT Color Wheel

Over the past 25+ years of leading the concealment industry, we have perfected the sample approval process! If you've provided a physical sample from your site, a minimum of five photos using our SPOT Color Wheel matching guide, and the correct dimensions your sample should be SPOT on!

To ensure you get the best match possible, please read and follow these instructions.


- Take all sample verification photos from the same location.
- Ensure that work is performed in fair weather conditions. Review of samples in inclement weather is NOT recommended.
- Use all industry established safety practices.

1 Photograph Sample on Site

- a. Take sample to the same location as where the initial site photos were taken and attach to the building using duct tape.
- b. Take photos of the sample from distances of approximately 10 ft., 25 ft., and 50 ft.




- c. To ensure an accurate color match, photograph the sample in both sun and shade, as close as possible to the location where the concealment will be installed.

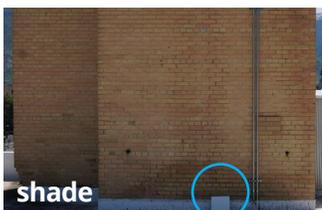

2 Submit Information to Raycap | STEALTH

- a. If the sample is approved, send photos of the sample on site (from Step 1) and notice of approval to your Project Manager or Sales Rep.

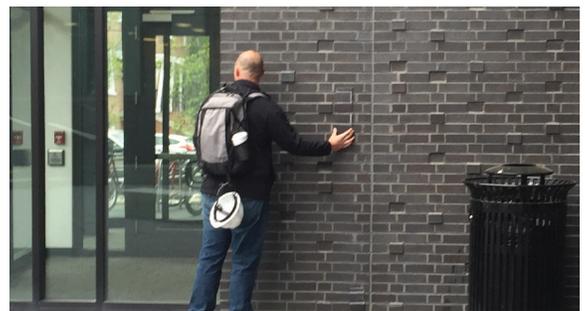

- b. If your sample requires revisions, send photos of the sample on site (from Step 1) and a detailed description of needed revisions (i.e. changes in brick or mortar color, changes in texture, etc) to your Project Manager or Sales Rep.

Have additional questions? Feel free to contact us, we'd be happy to help!